

Cleaning Instructions - NT

The following are recommendations for a proper thermoplastic handrail cleaning program. Daily or weekly cleaning maximizes the handrail's operating efficiency and service life and promotes a satisfying ride for pedestrians. For an added level of cleanliness ask EHC about AMRail, our anti-microbial handrails.

New Thermoplastic Handrails:

Always remove protective film after installation of a new EHC thermoplastic handrail and before following the cleaning instructions below.

Cleaning Instructions:

- Apply EHC Cleaner to a damp cotton cloth or spray directly onto the handrail and wipe across handrail face, paying special attention to handrail underside. Wipe cleaner off of the handrail with a damp cloth.
- Rotate the handrail around the escalator or walk until entire handrail has been cleaned.

Motion Indicators & Brands:

- Apply EHC Cleaner to a damp cotton cloth or spray directly onto the motion indicator or brand and gently wipe across surface. Wipe cleaner off of location with a damp cloth.


Warning: Excessive rubbing may damage the motion indicator or brand surface, use moderate to light pressure.

Do not use Ethyl Alcohol.


Cleaning Schedule:

New Handrails: Clean immediately following installation

Existing Handrails: Daily or weekly is recommended

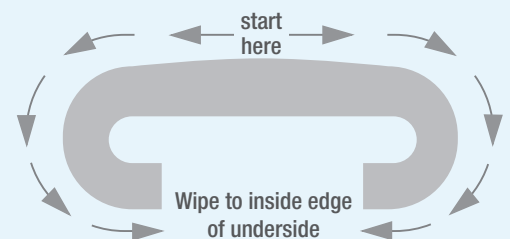

Start from centre and wipe outwards including underside.

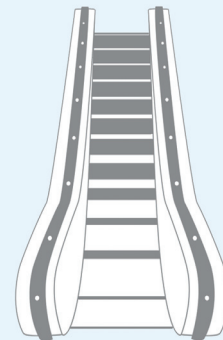

Keep motion indicators and brands looking their brightest by scheduling regular cleaning sessions.

Warning:

Do not use abrasive cleaners or solvents as they will damage surface finish. Do not use wax and other lubricants to improve the sliding ability of the handrail. If the lubricants come into contact with the drive sheave, the handrail will begin to slip.